User Manual

GETTING STARTED? EASY.

ZDC37202W

EN User Manual
Tumble Dryer

ZANUSSI

⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

GENERAL SAFETY

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).
- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, where the appliance door can not be fully opened.
- The ventilation openings in the base (if applicable) must not be obstructed by a carpet.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels. (if applicable)
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Obey the maximum load volume of 7kg (refer to the “Programme chart” chapter).

- Do not use the appliance if industrial chemicals have been used for cleaning.
- Wipe away lint that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

CHILDREN AND VULNERABLE PEOPLE SAFETY

⚠ **WARNING!**
Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.

- Children of less than 3 years should be kept away unless continuously supervised.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.

SAFETY INSTRUCTIONS

INSTALLATION

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not install or use the appliance where the temperature is less than 5°C or higher than 35°C.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always move the appliance vertically.
- The rear surface of the appliance must be put against the wall.
- When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is.

ELECTRICAL CONNECTION

WARNING! Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- Only for UK and Ireland. The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse.
- This appliance complies with the E.E.C. Directives.

USE

WARNING! Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Use this appliance in a household only.
- Do not dry the damaged items which contain padding or fillings.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the tumble dryer.

CARE AND CLEANING

WARNING! Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive

products, abrasive cleaning pads, solvents or metal objects.

DISPOSAL

WARNING! Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

INSTALLATION

UNPACKING

CAUTION! Before use all parts of the transport packaging must be removed.

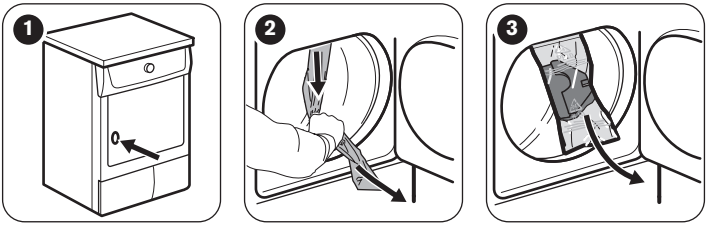

1. Open loading door.
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove foil hose and polystyrene padding from the machine.

DOOR REVERSAL

To make it easier to load or unload the laundry, the door can be reversed.

WARNING! The door must only be reversed by an authorised service engineer.

Please contact your Authorised Service Centre. The engineer will carry out the door reversal at your cost.

SPECIAL ACCESSORIES

- **stack kit**

Available from your Authorised Service Centre or your specialist dealer

These intermediate installation kits can be used to arrange the dryer and an washing machine (60 cm wide, front loaded) as a space-saving washer/dryer stack. The washing machine is at the bottom and the dryer is at the top.
Read carefully the instructions supplied with the kit.

- **drain kit**

Available from your Authorised Service Centre or your specialist dealer

Installation kit for direct draining of condensate into a basin, siphon, gully, etc. The condensate tank then no longer has to be drained, it must however remain in its intended position in the machine.
Read carefully the instructions supplied with the kit.

- **pedestal with the drawer**

Available from your Authorised Service Centre or your specialist dealer

To situate the dryer in optimal high and have some additional space to store (e.g. laundry).
Read carefully the instructions supplied with the kit.

EASY START

PRODUCT DESCRIPTION

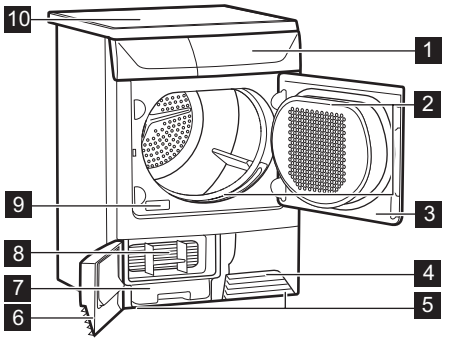

1 Control panel
2 Fluff filters
3 Appliance door
4 Ventilation grille
5 Adjustable feet
6 Heat exchanger door
7 Water container
8 Heat exchanger
9 Rating plate
10 Worktop

CONTROL PANEL

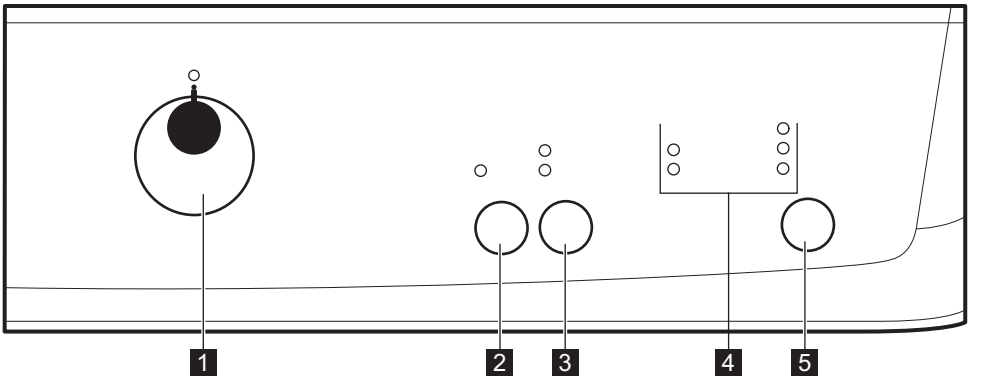

1 Programme knob and ⏻ OFF switch
2 Delicate button
3 Textile button: Cotton, Synthetic
4 Indicators: Drying , End/Anticrease , Condenser, Filter, Tank
5 Start/Pause button

PROGRAMME TABLE

Programmes	Time in minutes (about)	Type of load	Load (max.)[1] / Fabric mark
		Cotton	
Cupboard Dry[2)3)]	150	Drying level: cupboard dry.	**7kg/**
Damp	130	Drying level: textiles which are still to be ironed.	**7kg/**
Iron Dry [3)]	110	Drying level: applicable for iron.	**7kg/**
		Synthetic	
Extra Dry	65	Drying level: extra dry.	**3kg/**
Cupboard Dry [3)]	55	Drying level: cupboard dry.	**3kg/**
Iron Dry	40	Drying level: applicable for iron.	**3kg/**

1) The maximum weight refers to dry items.

2) The Cotton Cupboard Dry programme is the “Standard cotton programme” and it is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

3) For test institutes only: Standard programmes for tests are specified in the EN 61121 document.

OPTIONS

DELICATE

With this option you can set a delicate drying programme that has a low temperature. Use this option with a fabrics that have the symbol on the fabric label (e.g. acrylic, viscose).

TEXTILE

type of laundry: Cotton, Synthetic

Selection for time controlled programmes

SETTINGS

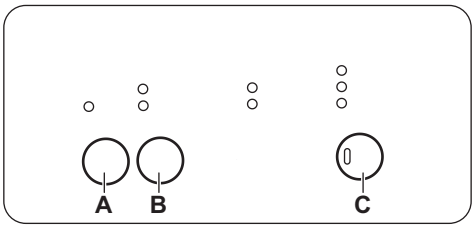

A) Delicate button
B) Textile button: Cotton, Synthetic
C) Start/Pause button

BUZZER ON/OFF

To deactivate or activate the acoustic signals, press and hold for approximately 2 seconds touchpads (**A**) and (**B**) at the same time.

BEFORE FIRST USE

Before you use the appliance for the first time do these operations:

- Clean the tumble dryer drum with a moist cloth.
- Start a short programme (e.g. 30 minutes) with moist laundry.

DAILY USE

START A PROGRAMME

1. Prepare the laundry and load the appliance.

CAUTION! Make sure that when you close the door, the laundry does not catch between the appliance door and the rubber seal.

2. Set the correct programme and options for the type of load.
3. Press the Start/Pause touchpad.

The programme starts.

CHANGE A PROGRAMME

1. Turn the Programme knob to ⏻ OFF
2. Set the programme.

AT THE END OF THE PROGRAMME

When the programme is completed:

- An intermittent acoustic signal operates.
- The indicators Drying, End/Anticrease, Filter and Tank comes on.
- The Start/Pause indicator is on.

The appliance continues to operate with the crease guard phase for approximately other 30 minutes.

The crease guard phase removes creases from your laundry.

You can remove the laundry before the crease guard phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed or completed.

When the crease guard phase is completed:

- The indicators Drying, End/Anticrease, Filter and Tank comes on.
- Start/Pause indicator goes off.

1. Turn the Programme knob to ⏻ OFF
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

Always clean the filter and empty the water container when a programme is completed.

STAND-BY FUNCTION

To decrease the energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the programme.
- After 5 minutes from the end of the programme.

INDICATOR LIGHTS

These lights indicate the following functions:

- **Drying**: This light indicates that the appliance is in the drying phase.
- **End/Anticrease**: This light is on at the end of the cooling phase, during the anticreasing phase and at the end of the programme.
- **Filter**: This light illuminates at the end of the programme to remind you that the filters must be cleaned.
- **Condenser** : This light indicate that the condenser must be cleaned.
- **Tank**: This light comes on at the end of the programme to remind you that the water reservoir must be emptied out. This light comes on also when the water reservoir is not inserted correctly.

HINTS AND TIPS

PREPARING THE LAUNDRY

- Close the zippers.
- Close the fasteners of the duvet covers.
- Do not keep ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from the pockets.
- If an item has the internal layer made of cotton, turn it inside out. Make sure that the cotton layer is always external
- We recommend that you set the correct programme applicable for the type of fabrics that are in the appliance.

- Do not put fabrics with strong colours together with fabrics with light colours. Strong colours can bleed.
- Use an applicable programme for cotton jersey and knitwear to prevent the items to shrink.
- Make sure that the laundry weight is not more than the maximum weight that is in the programme table.
- Dry only the laundry that is applicable for tumble dryer. Refer to the fabric label on the items.

Fabric label	Description
	Laundry that is applicable for tumble dryer.
	Laundry that is applicable for tumble dryer. Set the programme with standard temperature.
	Laundry that is applicable for tumble dryer. Set the programme with low temperature.
	Laundry that is not applicable for tumble dryer.

CARE AND CLEANING

CLEANING THE FILTER

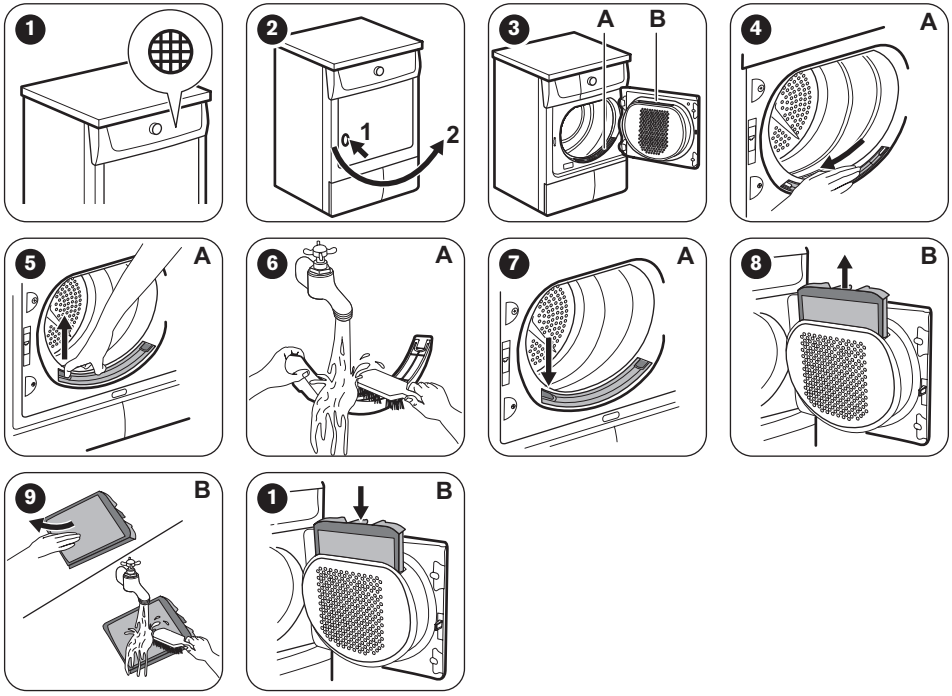

DRAINING THE WATER CONTAINER

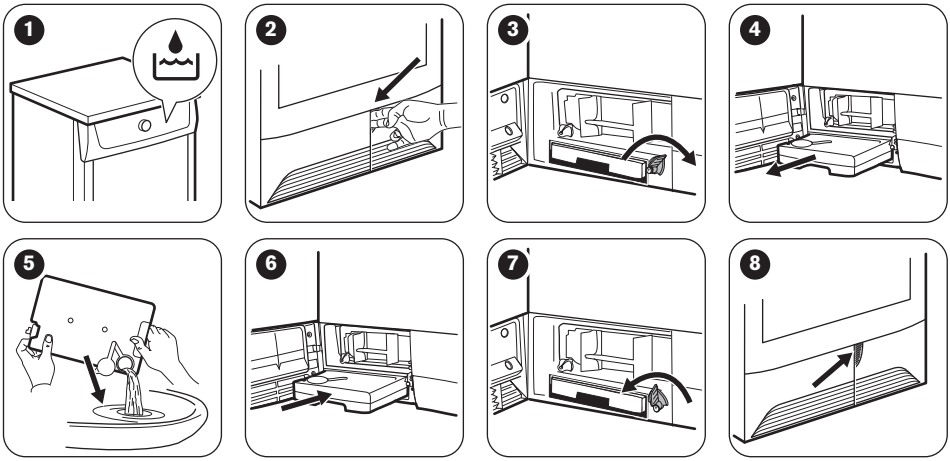

You can use the water from the water container as an alternative to distilled water (e.g. for steam ironing). Before you use the water, remove dirt residues with a filter.

CLEANING THE CONDENSER

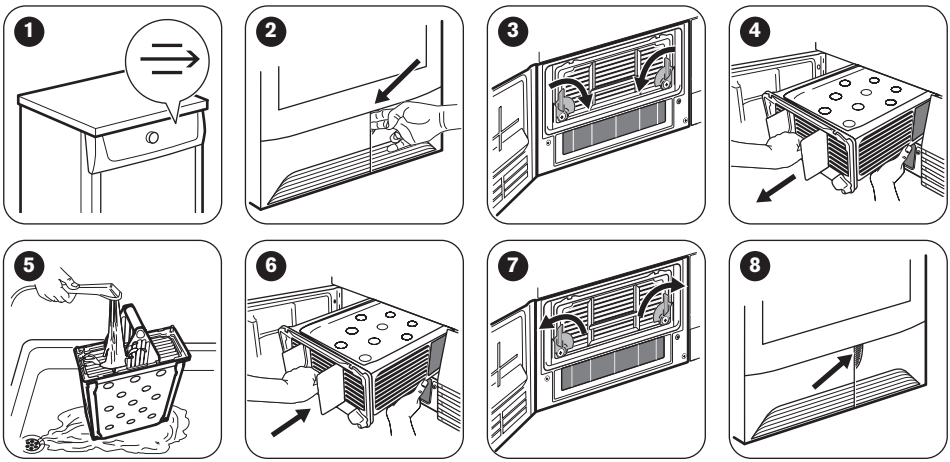

CLEANING THE DRUM

WARNING! Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum ribs. Dry the cleaned surfaces with a soft cloth.

CAUTION! Do not use abrasive materials or steel wool to clean the drum.

CLEANING THE CONTROL PANEL AND HOUSING

Use a standard neutral soap detergent to clean the control panel and housing.
Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.

CAUTION! Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance.

CLEANING THE AIRFLOW SLOTS

Use a vacuum cleaner to remove the fluff from the airflow slots.

TROUBLESHOOTING

Problem	Possible solution
You cannot activate the appliance.	Make sure that the mains plug is connected to the mains socket.
	Check fuse in fuse box (domestic installation).
The programme does not start.	Press Start/Pause.
	Make sure that the appliance door is closed.
The appliance door does not close.	Make sure that the installation of the filter is correct.
	Make sure that the laundry does not catch between the appliance door and the rubber seal.
The appliance stops during operation.	Make sure that the water container is empty. Press Start/Pause to start the programme again.
Drying cycle lasts an unusually long time.[1)]	Make sure that the weight of the laundry is applicable to the duration of the programme.
	Make sure that the filter is clean.
	The laundry is too wet. Spin the laundry in the washing machine again.
	Make sure that the room temperature is not too warm.
Drying cycle ends shortly after programme starts.	Set the Time Drying or the Extra Dry programme.

1) After maximum 5 hours, the programme ends automatically

If the drying results are not satisfactory

- The set programme was incorrect.
- The filter is clogged.
- The condenser is clogged.
- There was too much laundry in the appliance.
- The drum is dirty.
- Incorrect setting of the conductivity sensor.
- The airflow slots are clogged.

TECHNICAL DATA

Height x Width x Depth	850 x 600 x 600 mm (maximal 630 mm)
Max. depth with the appliance door open	1090 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	108 l
Maximum load volume	**7** kg
Voltage	230 V
Frequency	50 Hz
Necessary fuse	13 A
Total power	2350 W
Energy efficiency class	**C**
Energy consumption[1)]	**4,70** kWh
Annual energy consumption[2)]	552 kWh
Left—on mode power absorption	0,0 W
Off mode power absorption	0,0 W
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	**IPX4**

1) With reference to EN 61121. 7kg of cotton centrifuged at 1000 rpm.
2) Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No 392/2012).

CONSUMPTION DATA

Programme	Spun at / residual humidity	Drying time	Energy consumption
Cotton 7 kg			
Cupboard Dry	1400 rpm / 50%	130 min.	4,13 kWh
	1000 rpm / 60%	150 min.	4,70 kWh
Iron Dry	1400 rpm / 50%	100 min.	3,14 kWh
	1000 rpm / 60%	110 min.	3,58 kWh

Programme	Spun at / residual humidity	Drying time	Energy consumption
Synthetic 3 kg			
Cupboard Dry	1200 rpm / 40%	55 min.	1,45 kWh
	800 rpm / 50%	60 min.	1,65 kWh

ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

WWW.ZANUSSI.COM/SHOP

CE

136926411-A-252014